


# Messenger®

## ASSEMBLY INSTRUCTIONS

Installation Hardware provided:

4- 5/8" washers, 4- lag shields, 4- 3/8" lag bolts.

1. Place template over mounting surface at desired location. Use the color coordinated outlines as a guide, dependant on width of unit.
2. Mark bolt locations through the paper and onto mounting surface, 2 per side. Installer needs to drill 5/8" holes into mounting surface.

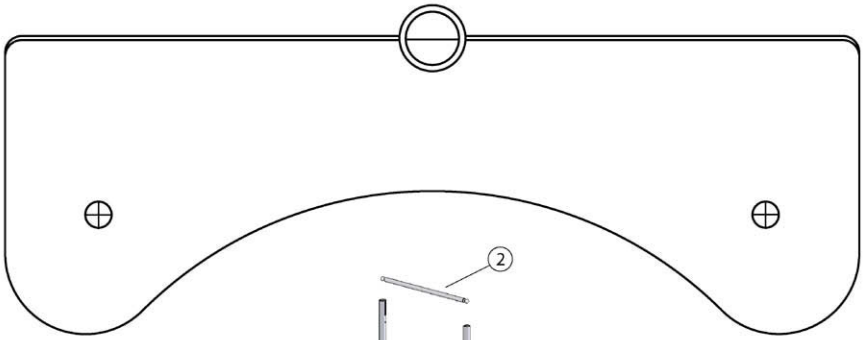

- A) Anchor bases ① to surface with hardware provided.
- B) Slide upper rod ② into upper banner hem.
- C) Place upper rod (with banner) into vertical slots at the top of each pole.

D) Slide lower rod ③ into lower banner hem.

E) Pull banner tight and place bolts through appropriate height adjustable holes ④ and into lower rod.

**NOTE:** Hold lower rod horizontal while tightening or loosening bolts.

